

KBLED50 USB BLE Dongle

- Quick guide

- Part No: 829535

Package Contents

KBLED50 USB BLE Dongle
Quick guide
Connect Barcode

System Requirements

OS: Windows 7/8/10/11

Specifications

Bluetooth Standards: Bluetooth Low Energy 5.0

Radio Frequency: 2.4 GHz

Physical Dimensions: 0.87" x 0.59" x 0.21" (22 mm x 15 mm x 5.35 mm)

Weight: 0.07 oz (2.0 g)

Antenna: Internal Chip Antenna

Interface: USB 2.0 (HID/Serial)

Transfer Rate: Up to 2.0Mbps

OS support: Windows 7/8/10/11




KBLED50 USB BLE Dongle



Quick Guide

1. Insert KBLED50 USB BLE Dongle into your PC USB port.
2. Windows will automatically install "HID Keyboard Device" which can be verified from Device Manager.

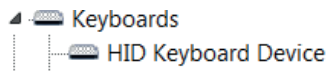

3. Attach "Connect" barcode sticker to PC next to KBLED50.
4. Scan the "Connect" barcode included in this package using a KDC and the KBLED50 will be connected to the KDC automatically.
5. Scan the "USB Dongle Serial" barcode to switch KBLED50 to "Serial Mode" from "HID Mode."

USB Dongle Serial

 


6. Scan the "USB Dongle HID" barcode to switch KBLED50 back to "HID Mode" from "Serial Mode."

USB Dongle HID



7. KBLED50 will be configured as a COM port in "Serial Mode" which can be verified from Device Manager.



116 Village Blvd, Ste 305, Princeton, NJ 08540
+1 609-256-4700 p | +1 609-228-4373 f
info@koamtac.com | www.koamtac.com

829535