

KDC270 & KDC280 Charging Adaptor Installation Manual



\* All pictures shown are for illustration purposes only. Actual product may vary. Follow these same instructions for installing Adaptor with or without Bumper to charge KDC270/280 utilizing 4-slot Charging Cradle.

## Additional KDC270/280 Accessories:


• Protective Boot



116 Village Blvd, Ste 305, Princeton, NJ 08540 +1 609-256-4700 p | +1 609-228-4373 f info@koamtac.com | www.koamtac.com

## What's in the box?

- Charging Cradle
- Adaptor
- Bumper

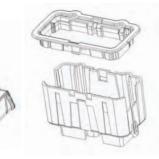

\*KDC270/280 sold separately

#### Installation Instructions

For charging KDC270/280 with protective boot

1. Align ridges on Adaptor with those on Charging Cradle. Insert firmly, until you hear a click. (A,B)





2. Insert KDC270/280 into Charging Cradle with Adaptor, ensuring KOAMTAC logos face same direction. (C,D)





Charging KDC270/280 with lanyard attached (with or without protective boot)

If lanyard is connnected to KDC270/280, pull lanyard to back of KDC270/280 and align with ridge when inserting KDC270/280 into the cradle. (E,F)

(Back)





### Installation Instructions

For charging KDC270/280 without protective boot


Rumne

Adaptor

- 1. Align the ridges on bumper to the ridges on Adaptor. Insert Bumper into Adaptor until you hear a click. (G,H)
- 2. Insert connected Bumper and Adaptor into the Charging Cradle firmly, until you hear a click. (I,J)

J

3. Insert KDC270/280 into Charging Cradle with Bumper and Adaptor, ensuring KOAMTAC logos face same direction. (K,L)

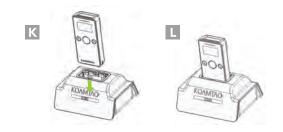

# **Removal Instructions**

Remove Adaptor (without bumper) from Charging Cradle utilizing fingers and a standard (flat-head) screwdriver. (M,N)







## Separating Bumper and Adaptor

Place standard (flat-head) screwdriver at bottom of connection point of Bumper and Adaptor. Push Bumper point in and up, then pull Bumper out of Adaptor. (P,Q)





MG\_KDC280-CC\_20240220 837180