
### What's in the Box?

- 1 x Hand Strap Adaptor
- 1 x Hand Strap Module
- 1 x Hand Strap
- 4 x screws + 1 extra

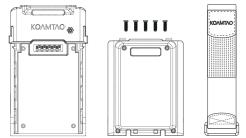


\*SmartSled sold separately. Tweezers and PH0 screwdriver (not included)

## Hand Strap Module Assembly Instructions

1. Using tweezers, carefully remove all four (4) screw caps from the back of the SmartSled. (A)



2. Remove all four (4) screws from the back of the SmartSled. (B)



3. Remove the cover plate from the back of the SmartSled. (C)



4. Align screw holes of Hand Strap Adaptor with screw holes of the SmartSled. Use four (4) included screws to attach Hand Strap Adaptor to SmartSled. (D)



#### Additional KDC SmartSled Accessories:

- 1-Slot Charging Cradle
- 4-Slot Charging Cradle
- HF Companion
- 0.5W UHF Companion
- 1.0W UHF Companion
- Pistol Grip Extended Battery



116 Village Blvd, Ste 305, Princeton, NJ 08540 +1 609-256-4700 p | +1 609-228-4373 f info@koamtac.com | www.koamtac.com



**KDC SmartSled Hand Strap Assembly Manual** 



\* For KDC470/475/480/485 SmartSled Scanners.


5. Align notch in top of Hand Strap Module with top notch of the Hand Strap Adaptor. (E)





## Attaching the Hand Strap

 Place the metal ring on the Hand Strap into the groove at the bottom of the Hand Strap Module.
Pull down until it clicks. (G)

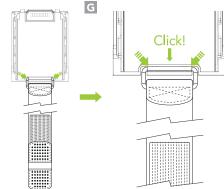

\*Hook-and-loop fastener side up

Align the top notch of the Hand Strap Module with the top notch of the Hand Strap Adaptor. Push the Hand Strap Module upwards until it clicks. (H)




3. Lift bottom of hand strap to top and slide the hand strap through the loop at the top of the Adaptor. connect the hook-and-loop fasteners to form a connected hand strap. (I)



# Removing Hand Strap Module

Disconnect the hook-and-loop fastener. Squeeze tabs on both sides of the Hand Strap Adaptor and slide the Hand Strap Module down. Pull the Hand Strap Module away from the Hand Strap Adaptor and the SmartSled. (J)

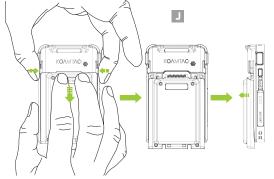

AM\_KDC470\_HandStrap\_20220316