


What's in the Box?

- Extended Battery Adaptor
- Extended Battery Hand Strap
- 4000mAh Extended Battery
- 5x Screws

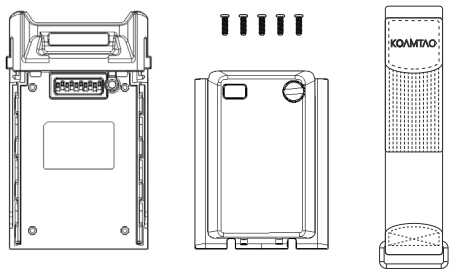


KDC SmartSled sold separately.

Tweezers and a PH0 screwdriver (not included) are required for assembly.

About the Extended Battery Companion

The KOAMTAC Extended Battery Companion adds high-capacity power to your SmartSled, helping extend usage time and minimize interruptions. Designed for all-day performance, it keeps both the SmartSled and mobile device charged and ready, with an LED status indicator for easy monitoring.

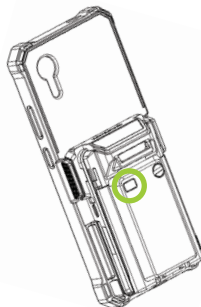

When Charging

- Green:** Fully charged
- Orange:** Charging
- Red:** Low battery

When in Use

- Blinking Green:** Fully charged
- Blinking Orange:** Discharging
- Blinking Red:** Low battery



100 Village Blvd Ste 300, Princeton, NJ 08540
+1 609-256-4700 p
info@koamtac.com | www.koamtac.com



Extended Battery for KDC SmartSled

Mini Guide




For KDC480/485/1000/1100 SmartSled Scanners.


For details on warranty, certifications, and legal compliance, please refer to koamtac.com and the Reference Manual.

Assembly Instructions


1. Using tweezers, carefully remove all four (4) screw caps located on the back of the KDC SmartSled (A).

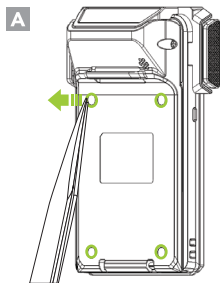


2. Using a PH0 screwdriver, remove all six (6) screws from the back of the KDC SmartSled (B). Keep the top 2 screws in a safe place, as they are needed to return the device to its factory configuration without the Companion.

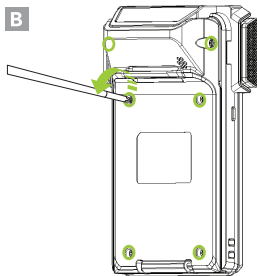

3. Remove the cover plate from the back of the KDC SmartSled (C).

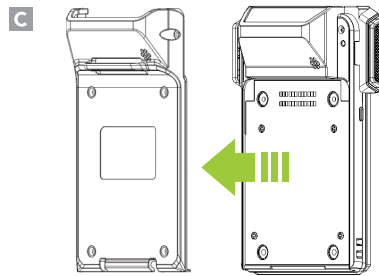

4. Align the screw holes of the Extended Battery Adaptor with the screw holes on the KDC SmartSled. Attach using the four (4) included screws (D).

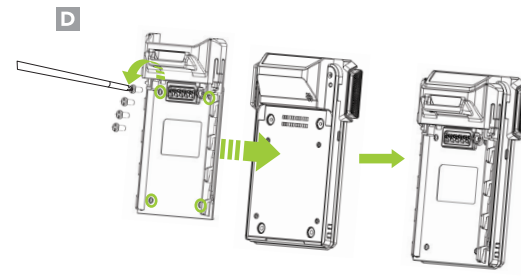


*KDC1100 shown for illustration purposes.
Process is the same for KDC1000, KDC480, and KDC485.


*KDC1000 and KDC1100 require removal of 6 screws. KDC480 and KDC485 do not include the top 2 screws and require removal of the bottom 4 screws only.

Assembly Instructions (Continued)

5. Align the Extended Battery Companion with the Extended Battery Adaptor (E), ensuring the side rails and top hook on the Adaptor align with the Extended Battery.

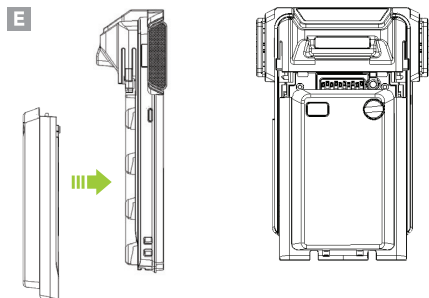


6. Slide the Extended Battery Companion upward until the hooks engage and it clicks into place (F).

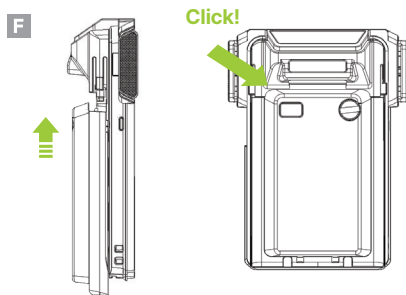


Using the Lock Screw

Using a coin or flat-head screwdriver, tighten the lock screw to secure the unit. Turn clockwise to tighten and counterclockwise to loosen. The screw is captive and cannot be fully removed.

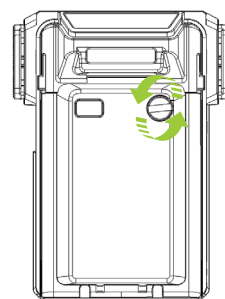


Removing Extended Battery

Loosen the lock screw, then squeeze the tabs on both sides of the Extended Battery Adaptor. Slide the Extended Battery downward and away to detach it from the Adaptor and KDC SmartSled.

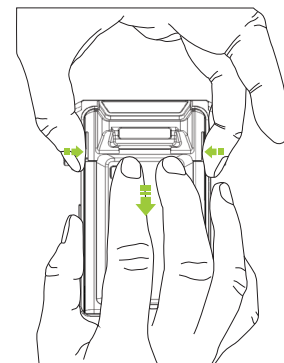


Hand Strap Assembly Instructions

1. Place the metal ring on the Hand Strap into the hook at the bottom of the battery. Pull down until it clicks (G).

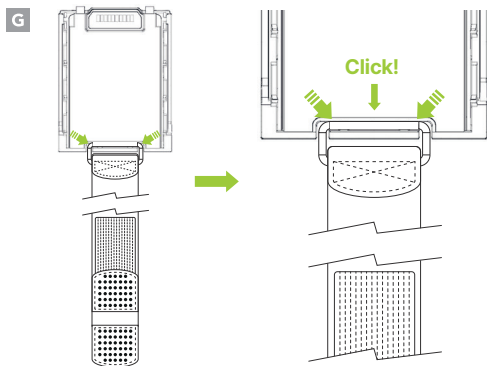


*Hook-and-loop fastener side up

2. Attach the Extended Battery to the Extended Battery Adaptor. Lift the hand strap and slide it through the top loop of the Adapter, then fasten the hook-and-loop straps to secure (H,I).

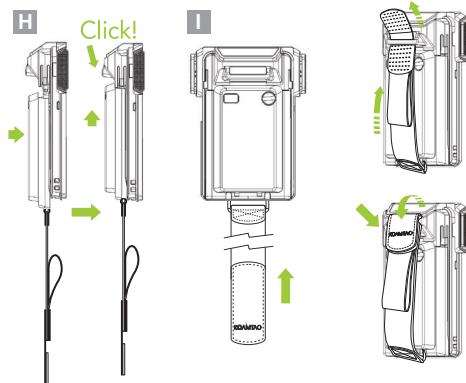

Exchanging the Extended Battery

1. Squeeze both tabs on the Extended Battery Adaptor. Slide the battery down, then lift upward (J).

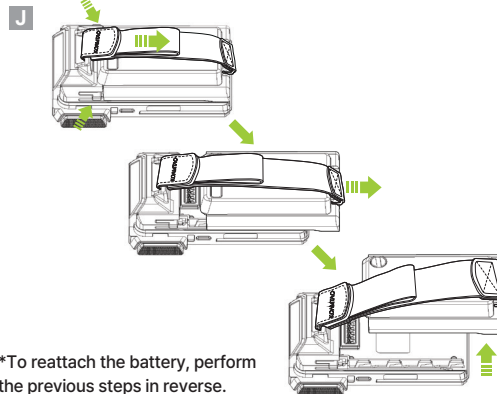

*To reattach the battery, perform the previous steps in reverse.

2. Rotate the battery, then remove it from the metal ring (K).

