


### What's in the Box?

- ▶ 1 X SKXSLED-UHF 1.0W
- ▶ 1 X 6000mAh Lithium-Polymer Battery
- ▶ 1 x Contact PCB
- ▶ 1 x Companion Cushion
- ▶ 8 screws + 1 extra

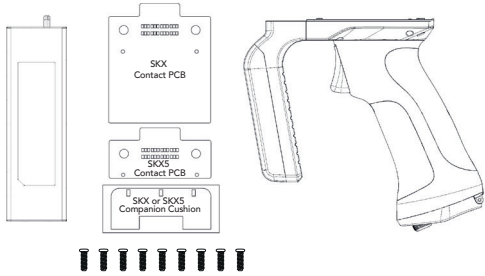

\*SKX sold separately. Tweezers and PH0 screw driver (not included) will be necessary to complete assembly.

### Additional Accessories

- ▶ 0.5W UHF Reader Companion
- ▶ 2000mAh Extended Battery Companion
- ▶ Pistol Grip Companion (battery optional)
- ▶ SKX 1-Slot Charging Cradle
- ▶ SKX 5-Slot Charging Cradle
- ▶ XCover 1-Slot Charging Cradle
- ▶ XCover 5-Slot Charging Cradle
- ▶ SKXSLED-mPOS
- ▶ SKXSLED-MSRIC



116 Village Blvd, Ste 305, Princeton, NJ 08540  
 +1 609-256-4700 p | +1 609-228-4373 f  
 info@koamtac.com | www.koamtac.com




### SKX™ SmartSled® 1.0W UHF Reader Companion Assembly Manual



\* All pictures shown are for illustration purposes only.  
 \* Actual product may vary.


### Assembly Instructions

Using tweezers, carefully remove all four (4) screw caps from the back of the SKX™ SmartSled®. Then, remove all (4) screws from the back of the SKX. (A)

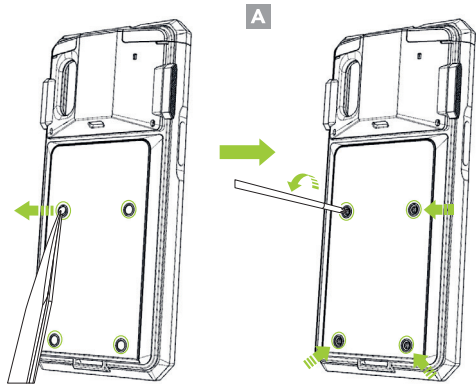


### Contact PCB Assembly - SKX6Pro/7Pro

1. Remove the blue protective film from the front of the companion PCB. Next, attach the contact board to the back of the SKX as shown below. (B)

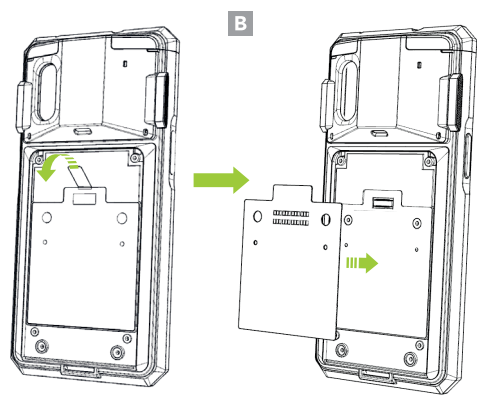


2. Remove the transparent protective film from the back of the companion cushion and attach it to the back of the SKX as shown below. (C)

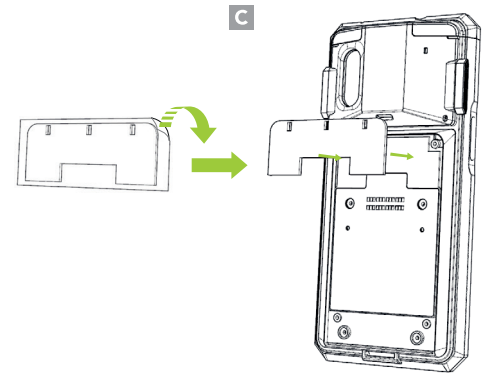


### Contact PCB Assembly - SKX5

1. Remove the blue protective film from the front of the companion PCB. Next, attach the contact board to the back of the SKX5 as shown in the image. (D)

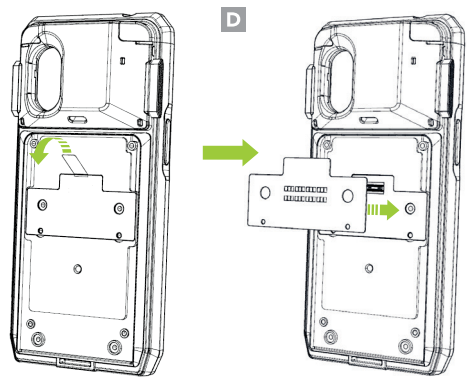


2. Remove the transparent protective film from the back of the companion cushion and attach it to the back of the SKX5 as shown below. (E)

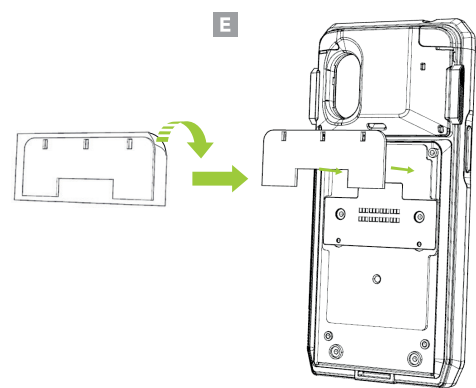


### 1.0W UHF Reader Companion Assembly


1. Remove the blue protective film from the top of the SKXSLED-UHF1.0W. (F)

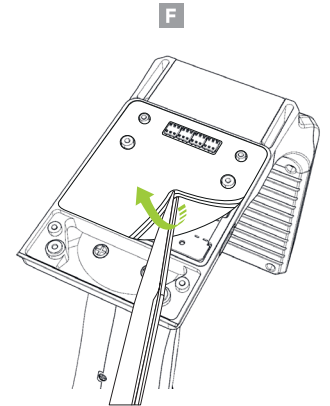

2. Align the screw holes of the SKXSLED-UHF 1.0W with the screw holes of the SKX. (G)

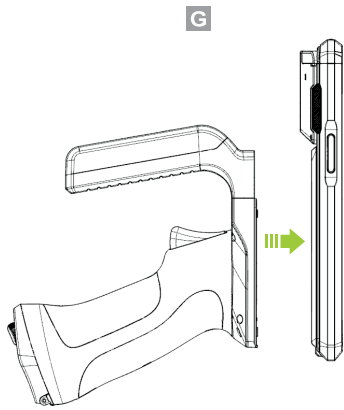


3. Use the eight (8) included screws to attach the SKXSLED-UHF1.0W to the SKX as shown as below. (H)

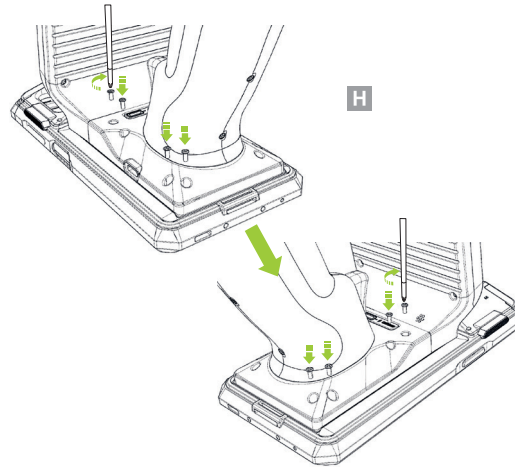


## 6,000mAh Lithium-Polymer Battery


1. Turn the battery door knob counterclockwise and open the battery door as shown below. (I)

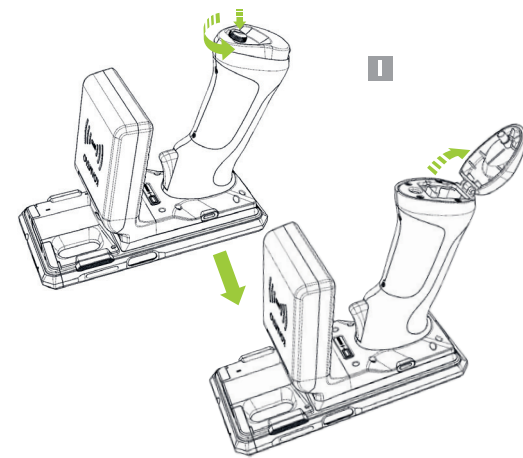


2. Insert the battery into the SKXSLED-UHF1.0W using the inner guide groove. (J)

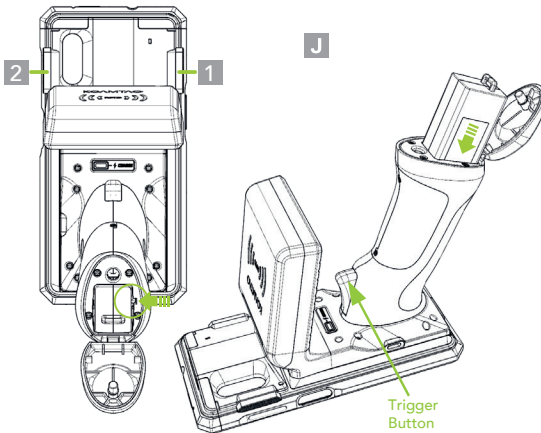

3. Close the battery door and turn the battery door knob clockwise to lock. (K)

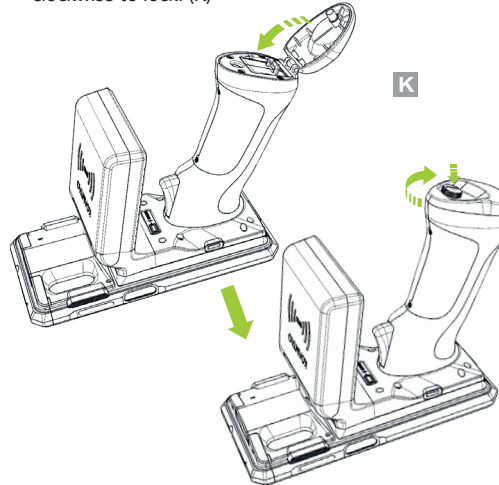

## Battery Status

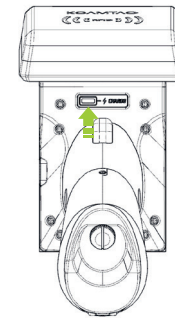

When the device is charging

**Red:** Low Battery  
**Orange:** Charging  
**Green:** Fully Charged

When the battery is in use and device is discharging

**Blinking Red:** Low Battery  
**Blinking Orange:** Discharging  
**Blinking Green:** Fully Charged

\*The LED blinks when the battery is in use.

## Toggling Read Modes

There are two read modes in which the SCAN or Trigger buttons work and they are toggled via hotkey command.

\* Please refer to figure J for location of keys 1 and 2.

- **Hotkey:** Input SCAN Buttons 1, 1, 2, 2, 1, 2 within 3 sec.
- **Barcode Mode:** When entered into this mode, 1 long and 1 short beep will be heard. Barcodes can be read with SCAN or Trigger buttons.
- **Tag Reading Mode:** When entered into this mode, 1 long and 2 short beeps will be heard. UHF tags can be read with SCAN or Trigger buttons.

## Changing Tag Read Mode

There are 3 tag read modes: Active, Single, or Multiple. The tag read mode is changed by scanning one of the following barcodes:

## Active Read Mode

Simultaneous reading of multiple tags while pressing SCAN or Trigger buttons.

Active Read Mode



## Single Read Mode

Only one tag is read each time the SCAN or Trigger button is pressed.

Single Read Mode



## Multiple Read Mode

When pressing SCAN or Trigger buttons, multiple tags are simultaneously read for the set duration (default: 10 seconds).

\* Time setting can be changed in Settings ->Reading Timeout.

Multiple Read Mode

